

# Wireless Barcode Scanner User's Manual



V9.7.0

## Introduction

Wireless barcode scanner transfer the scanned data to receiver wirelessly ,then the receiver transfer data to computer terminal, the scanner is powered by the inserted lithium battery, please charge battery in time if low power.

It is recommended to fully charge the battery on first use. The receiver and scanner have been paired already in default. If you want to re-pair, just scan the pair code on receiver. If the pair code is missing, refer to the 1.8 pairing method.

The setting is divided into scanner part and receiver part. You can restore all settings to factory default with below steps:set scanner to default→pairing scanner with receiver (ignoring this step if paired)→set receiver to default.

“ \* “ default setting.

## Part one : Scanner Setting

### 1. Set scanner to default



### 2. Working mode



#### Immediate

(The scanned data will be not stored in scanner ,it will be directly transferred to receiver. There will be LED flashing and beeper as reminder if transferring failed.)



#### \*Auto

(The scanned data will be stored in scanner when no signal. Data will be transferred to receiver when signal recover.)



#### Inventory Input

(The scanned data will be stored in scanner and not transferred to receiver.)



#### Inventory Output

(All data stored in scanner will be transferred to receiver and the scanner automatically enter the inventory input mode after data is fully transferred.)

### 3. Engine sleep



10S



\*1Min



5Min



10Min



None

### 4. Scanner sleep



10S



\*1Min



5Min



10Min



30Min

### 5. Transmission fail sound



OFF



\*ON

### 6. Startup sound



OFF



\*ON

### 7. Beeper



OFF



Short sound



\*Middle sound



Long sound



Low frequency



\*Medium frequency



High frequency

### 8. Auto pairing

 


Note: Scan the barcode, the device will enter into the one minute auto pairing mode (LED flash, beeper sound), re-plug in the receiver, the scanner will be paired successfully. Scan the barcode again if you want to exit the auto pairing mode.

### 9. Scanner version



### 10. Clean the stored data



Note: Scan the barcodes and the stored data will be cleaned.

## Part two : Receiver Setting

### 1. Set receiver to default



### 2. Interface selection



\*USB-HID



RS232



USB-VCP



KB

### 3. Keyboard language



\*USA



French

	German		*8 bit		*Middle sound		Upper case compulsive
	UK		6. Parity *None		Long sound		Lower case compulsive
	Turkey-Q		Even		Low frequency		Upper and Lower case convert compulsive
	Danish		Odd		*Medium frequency	14.Keyboard function	
	Janan		7. Stop bits *1 bit		High frequency		*OFF
	Spanish		2 bit	11. Startup sound			ON
	Italian		8. NAK *ACK/NAK OFF		OFF	15.Num lock	
	Universal		ACK/NAK ON		*ON		ON
4. Baud rate			4800	12. Terminator		16. Inter-character delay	
	4800		*CTS/RTS OFF		None		*None
	*9600		CTS/RTS ON		*Enter (0x0D)		10ms
	19200		10. Beeper tone Sound OFF		Return (0x0A)		20ms
	115200		Short sound		Tab (0x0D+0x0A)		50ms
5. Data bits					Space (0x20)		200ms
	7 bit			13. Caps lock		17. Receiver version	
					*None		